

## IMPORTANT SAFEGUARDS

When using your Iso-Tip filer/sander tool, basic precautions should always be followed.

### READ ALL INSTRUCTIONS BEFORE USING.

## DANGER

To reduce the risk of electric shock:

1. Do not place or store the tool where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.
2. Always unplug this tool from the electrical outlet when not in use.

## WARNING

To reduce the risk of burns, fire, electrical shock, or injury:

1. Close supervision is necessary when this tool is used by or near children.
2. Do not use attachments not recommended by the manufacturer.
3. Never operate this tool if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, return to Senasys Inc. for examination and repair.
4. Do not carry this tool by the cord or use the cord as a handle.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use this tool with damaged or broken attachments. Injury may occur.
10. Switch tool to "OFF" before disconnecting from power source.

## SAVE THESE INSTRUCTIONS

### PROPER USE AND MAINTENANCE INFORMATION

1. It is normal for the tool to become warm during normal use.
2. To clean the tool, use either a dry or dampened clean cloth. DO NOT USE benzine or thinner.
3. Do not store the unit in a wet or moist environment.
4. Do not touch any internal mechanisms. If the tool should need repair, do not attempt to repair it yourself. Return it to Senasys Inc.

## OPERATING YOUR FILER/SANDER

1. MAKE SURE SWITCH IS IN "OFF" POSITION.
2. Snap on desired attachment.
3. Plug into 120VAC power source.
4. Turn switch "ON" by sliding the switch toward the front of the tool.
5. Hold the tool so that the file or sanding tip is facing away from the operator when in use.
6. Use light pressure on the attachment. LET THE TOOL DO THE WORK.
7. Adhesive backed sanding sheets peel off the pad for easy replacement.

## TROUBLESHOOTING

If your filer/sander does not seem to be operating properly, please check the following:

- Check the outlet's current by plugging in another tool (one you know is in proper working condition) into the outlet.
- Make sure the unit is not connected to a power source that turns itself off when lights are turned off.
- If you still encounter problems with this tool, ship the tool, prepaid, with a note explaining the problem to:  
Iso-Tip. A Division of Senasys.  
Attn: Returns  
704 Bartlett Avenue  
Altoona, WI 54720

## AVAILABLE ACCESSORIES

The following accessories can be obtained directly from the manufacturer at [www.iso-tip.com](http://www.iso-tip.com).

6760	Flat Needle File
6761	Round Needle File
6762	Triangle Needle File
6763	1/2 Round Needle File
6767	100 Grit Medium Sandpaper - 12 Pack
6766	220 Grit Fine Sandpaper - 12 Pack
6765	400 Grit Extra Fine Sandpaper - 12 Pack
6769	Filer/Sander Assortment Kit Includes: Triangle, Flat, Round and 1/2 Round Files and Sander Pad
6764	Sander Pad 3 Pack Assortment Includes: 100, 220, and 400 Grit Sandpaper Assortment Pack
6768	Includes 4 each: 100, 220, and 400 Grit. Filer/Sander Assortment Kit
6769	Includes: Triangle, Flat, Round and 1/2 Round Files. Also 220 Grit Sanding Pad.